



Montaažiskeem / Mounting Instructions / Монтажная схема

Volkswagen T5 2010-

Art. 840303


Laternakandur Ø 60

Lampholder Ø 60

Носитель фар Ø 60




- |  |   |
|--|---|
| 1. Laternakandur / lampholder / носитель фар       | 1 |
| 2. Kronstein / bracket / кронштейн                 | 2 |
| 3. Vinkel / angeled plate / угольник               | 1 |
| 4. Puks / bushing / буksа                          | 1 |
| 5. Polt / bolt / болт M8x20 mm DIN 7380            | 1 |
| 6. Polt / bolt / болт M8x25 mm DIN 933             | 2 |
| 7. Polt / bolt / болт M8x70 mm DIN 933             | 1 |
| 8. Mutter / nut / гайка M8 DIN 985                 | 2 |
| 9. Seib / washer / шайба 8,4x24x2 mm               | 6 |
| 10. Vedruseib / spring washer / пружинная шайба A8 | 2 |

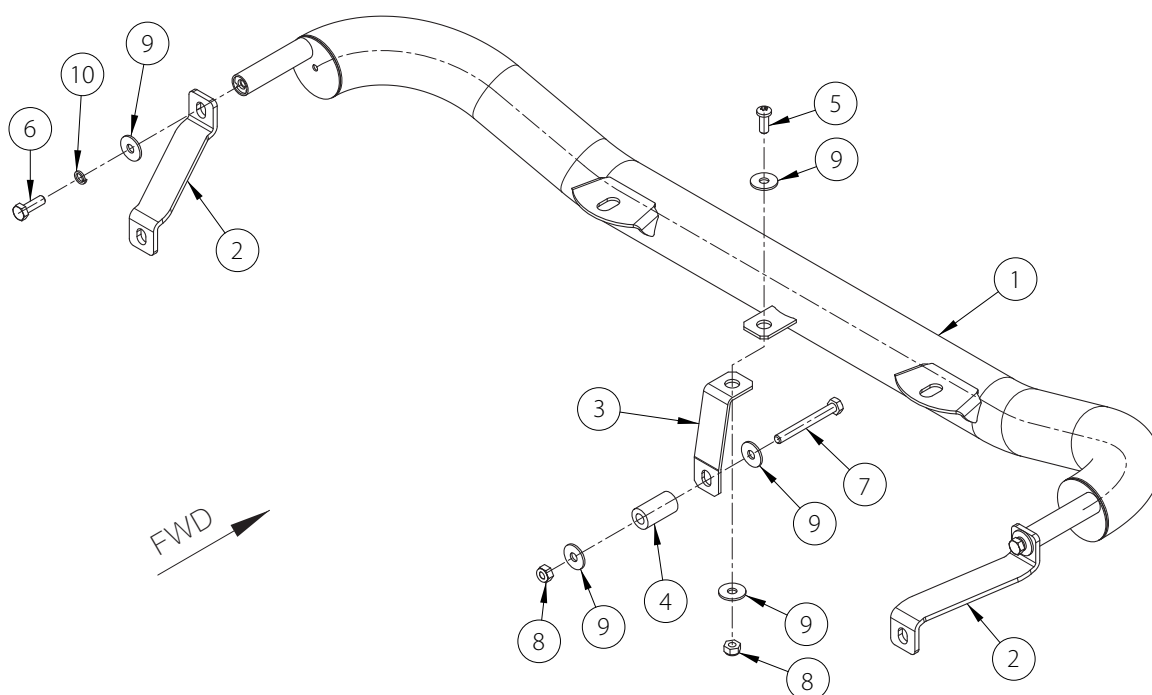

Vajalikud tööriistad / Required Tools / Необходимые инструменты




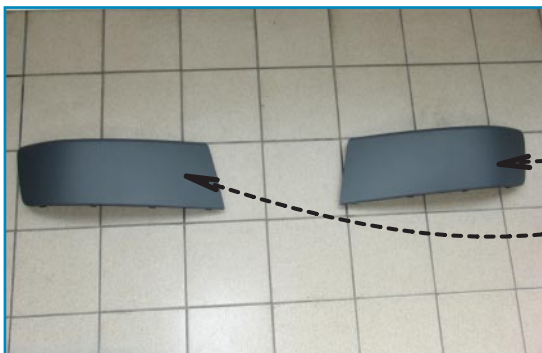


Pilt 1 / Pic. 1 / Рис. 1




Pilt 2 / Pic. 2 / Рис. 2

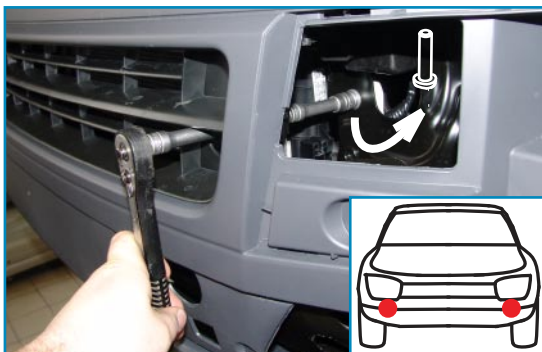

Pilt 3 / Pic. 3 / Рис. 3

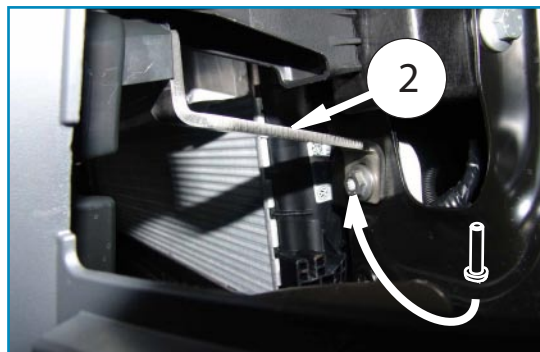


Pilt 4 / Pic. 4 / Рис. 4

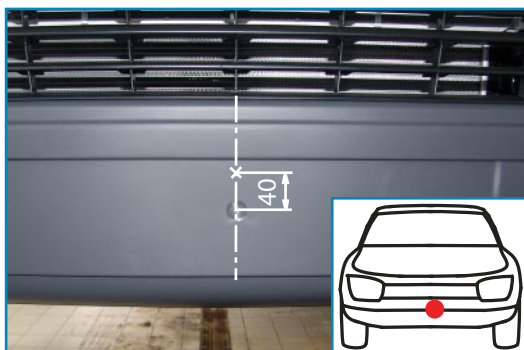


Pilt 5 / Pic. 5 / Рис. 5



Pilt 6 / Pic. 6 / Рис. 6

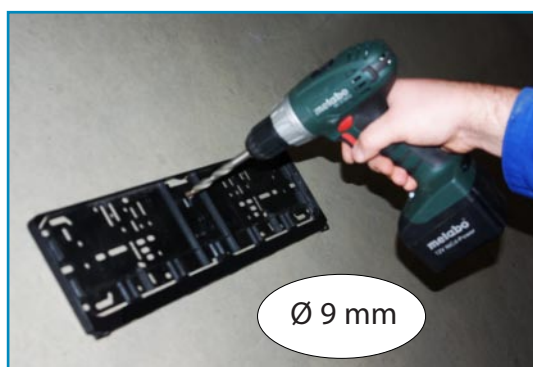

Pilt 7 / Pic. 7 / Рис. 7

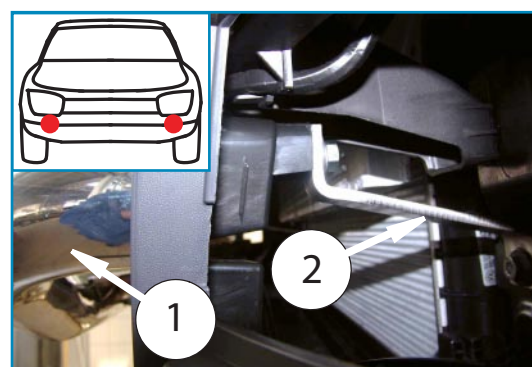

Pilt 8 / Pic. 8 / Рис. 8






Pilt 9 / Pic. 9 / Рис. 9



Pilt 10 / Pic. 10 / Рис. 10

Toote andmed / Data of the product / Данные о товаре

- Mõõdud / Measures / Размеры: 105x270x1010 mm.
- Kaal / Weight / Масса: 3,7 kg.
- Paigaldusaeg / Time of mounting / Время установки: 60 min.
- Tähtsad markeeringud / Important labels / Важные этикетки:

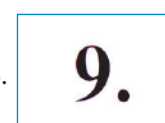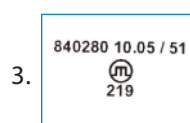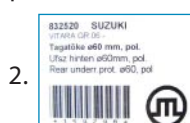

1. Komplekteerija number. / The number of the assembler / Номер комплектовщика
2. Tooteinfo pakendil / Product information on the package / Информация на упаковке
3. Tooteinfo tootel / Product information on the product / Информация на товаре
4. Kvaliteedi kontrolli tähis / Quality control number / Знак контроля качества